

# PATHFINDERLED® RESISTOR KIT

## WIRE INSTRUCTIONS FOR GL18RFL FOG LIGHTS

PART NO: TSR5W-RFL  
FITMENT: GL18RFL  
TOOL NEEDED: PLIERS

### INSTALLATION STEPS:

Using the quick snap connectors, follow the instructions below.



**STEP 1.** Place the **BLACK** wire coming out of the RESISTOR (TSR5W-RFL) into the red quick snap connector side that stops. The opposite side will be used to place the **BLACK** wire from the fog light into the loop. Close the snap cover and use pliers to press down and make a solid connection.

**STEP 2.** Use another quick snap connector and place the **RED** wire into the side that stops.

**STEP 3.** Next, place the **YELLOW** wire from the fog light into the loop. Close the snap cover and use pliers to press down and make a solid connection.

**STEP 4.** Do the same for the opposite fog light.

**STEP 5.** Test and confirm functionality before zipping the bike back up.

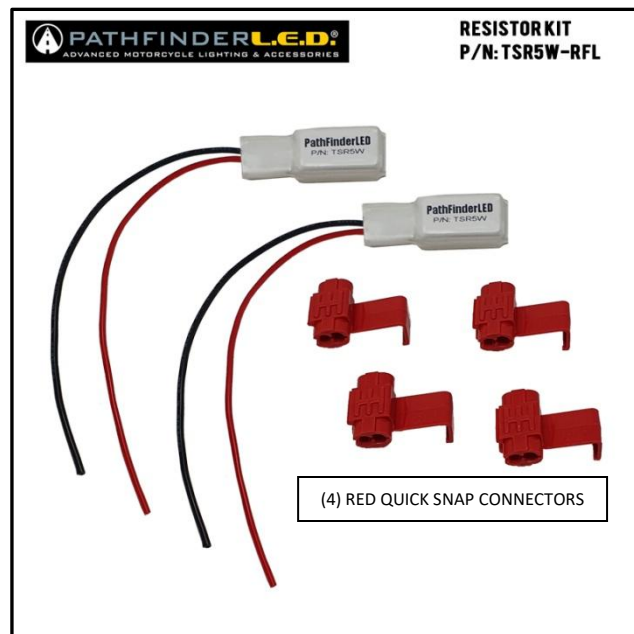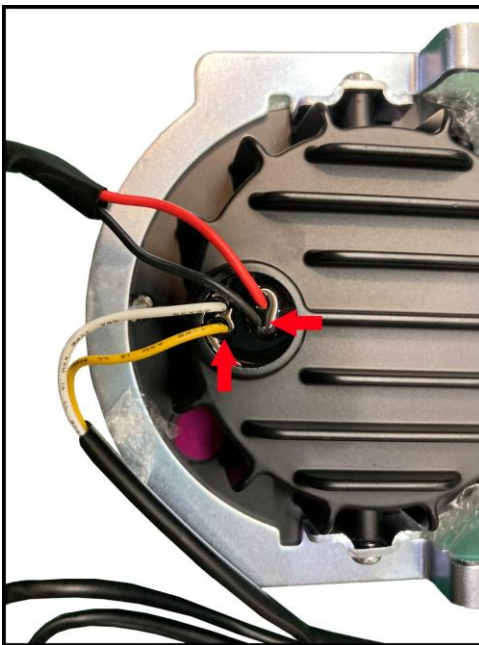

**FOR SERVICE/SUPPORT CONTACT: SERVICE@SOCALMOTOGEAR.COM**

*Disclaimer: Please follow instructions and care when installing this product. Maximum liability is limited to the purchase price of the product sold.*

© Copyright 2022 SoCalMotoGear.

Ver. 1.0